

BOOST YOUR GOOD FORTUNE!

EMBELLISH YOUR MACRAMÉ CHARM BRACELET WITH SPARKLING TREASURES




INSTRUCTION
GUIDE


MACRAMÉ CHARM BRACELET





Elements


- Pendants
Art. 6015
ø 17 mm
Crystal Silver
Shade 001 SSHA



- Pendants
Art. 6090
16 x 11 mm
Jet 280
Black Diamond 215



- Pendants
Art. 6670
ø 18 mm
Crystal Silver
Shade 001 SSHA


- Pendants
Art. 6680
ø 14 mm
Crystal Silver
Shade 001 SSHA


- Pendants
Art. 6722
ø 16 mm
Crystal Silver
Shade 001 SSHA


- Pendants
Art. 6744
ø 12 mm
Crystal Silver
Shade 001 SSHA



- Pendants
Art. 6860
12 x 10 mm,
20 x 18 mm
Cosmojet 001 COS




Material

- Jump Ring, ø 4 mm
- S-Clasp
- Leather String, ø 2 mm

STEP 1

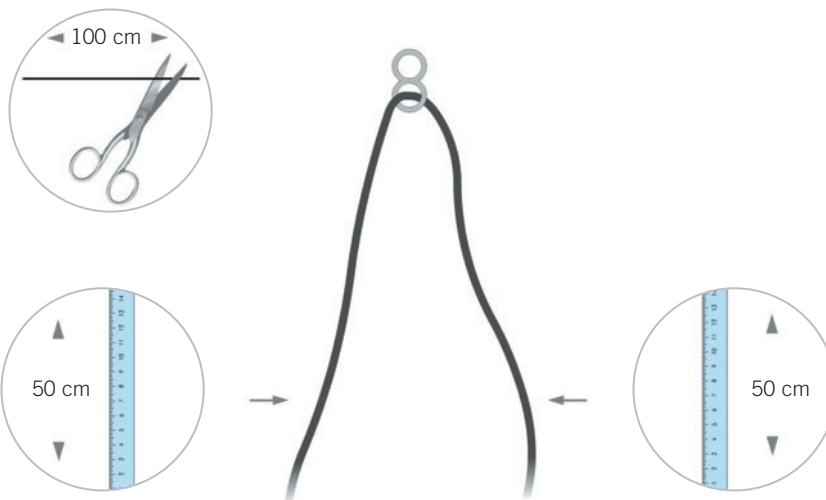

STEP 2

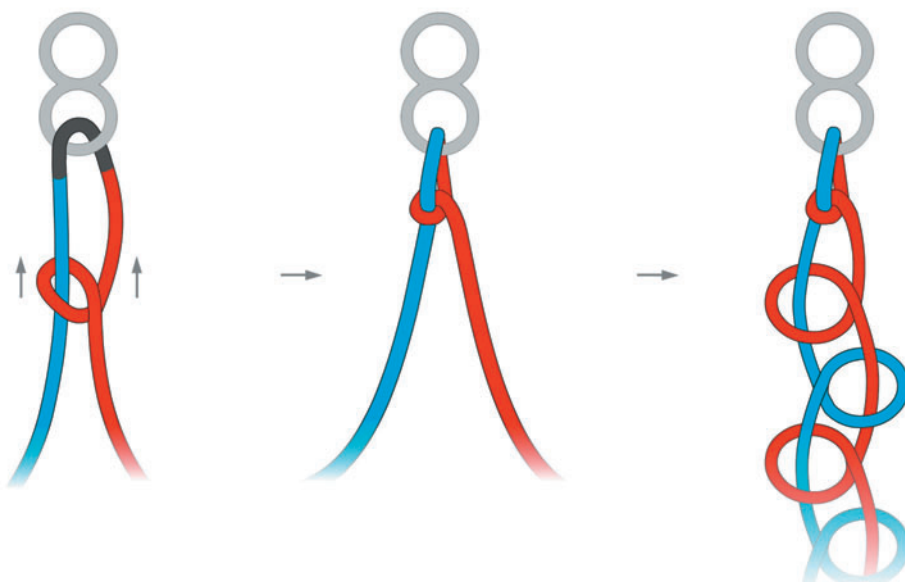


MACRAMÉ CHARM BRACELET




STEP 3



STEP 4

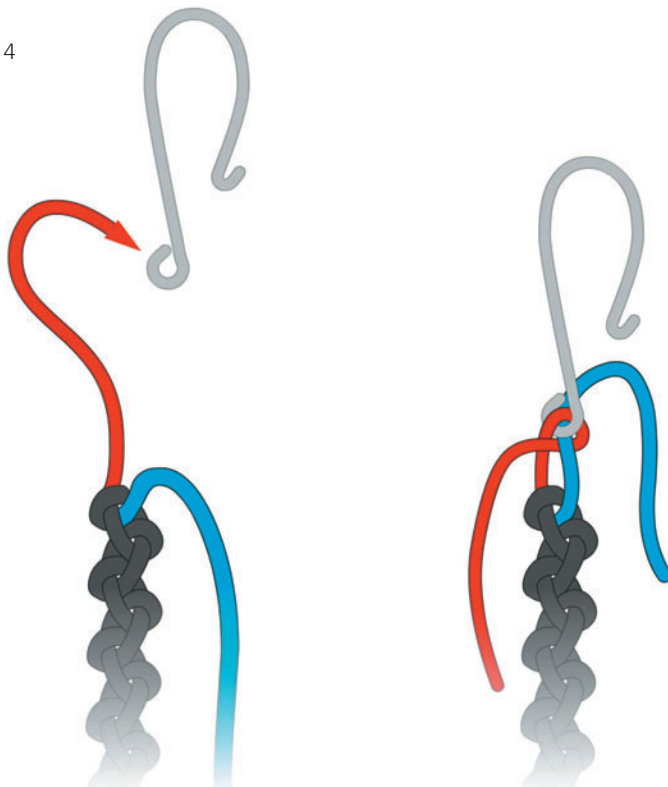


STEP 5

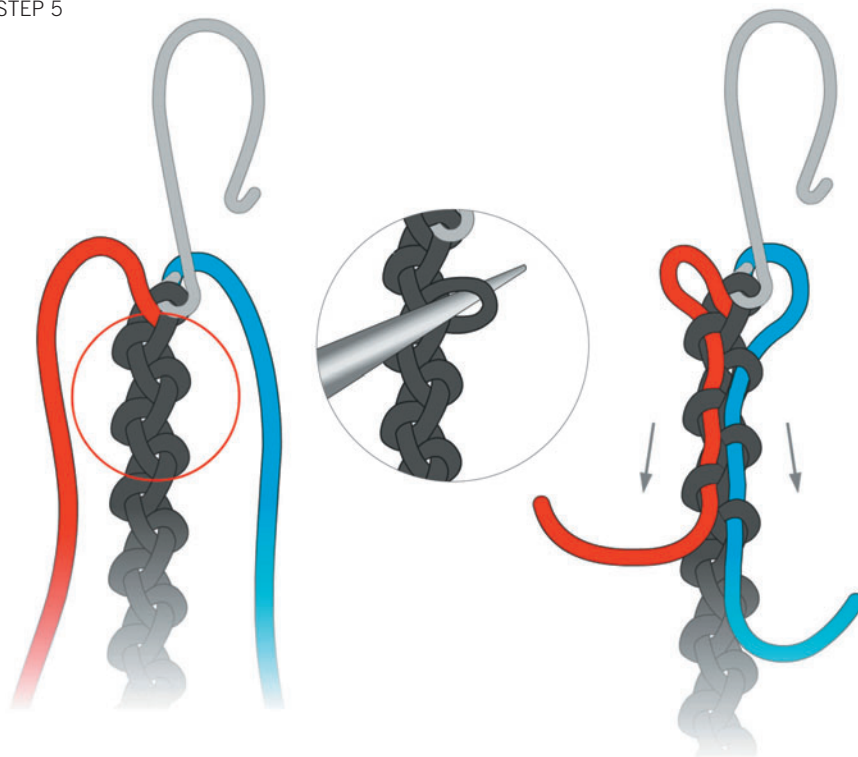

MACRAMÉ CHARM BRACELET

STEP 6

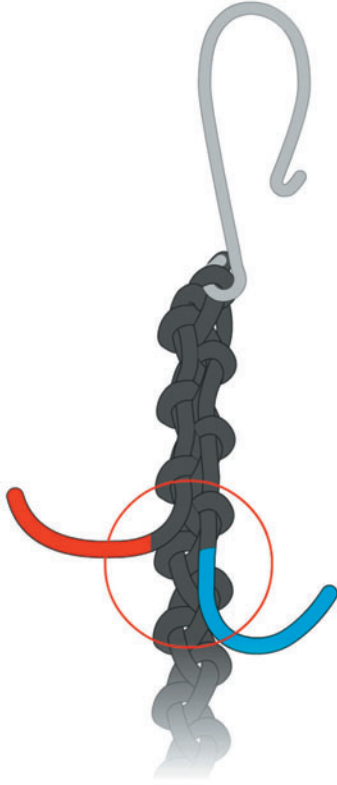

STEP 7

